


Flash-Vent Inside Corner Installation Recommendation

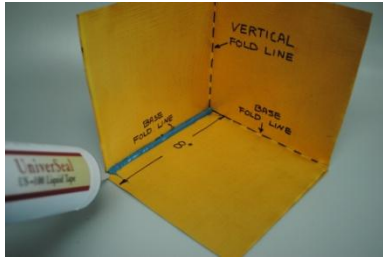

1) Install Multi-Flash inside corner



2) Cut base depth at corner




3) Fold corner by overlapping




4) Mark 45 degree angle



5) Cut off excess material of flap 1

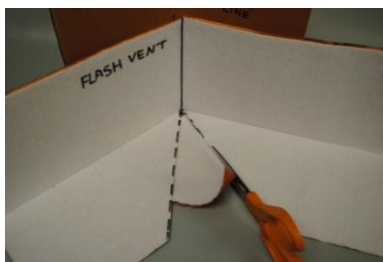

6) Mark and cut off excess material of flap 2

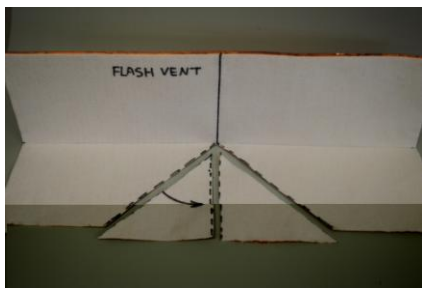

7) Base notch should form an angle equal to your corner angle



8) Adhere Multi-Flash inside corner to wall and base



9) Apply sealant where the edges of the Flash-Vent will be, including the butt joint at the base



10) Install Flash-Vent to the sealant on the Multi-Flash inside corner



11) Use a non-corrosive drip edge to terminate the Flash-Vent to the wall and seal the top of the termination bar with a sealant that will be compatible with all components it will be in contact with.